


R - box snap - on assembly instructions



Put the frame the table



Insert the adapter

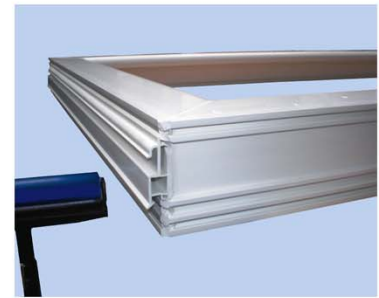

Snap the adapter



Put roller shutter box on trestles



Raise the frame



Insert the frame into the base profile



Press the frame adapter into the base profile




Finished connection



Screw on the handles



Position truss head

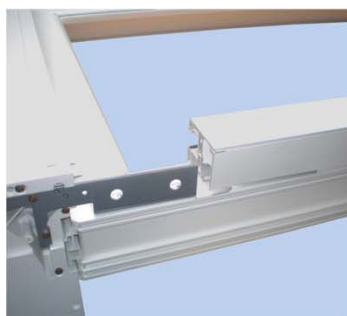

Snap on the guide rail



Slide the guide rail under the roller shutter box



Ready element